




Casio Exilim EX-Z850 Battery Casing Disassembly

How to remove the battery casing for cleaning and to check the connections with the rest of the camera.

Written By: Logan

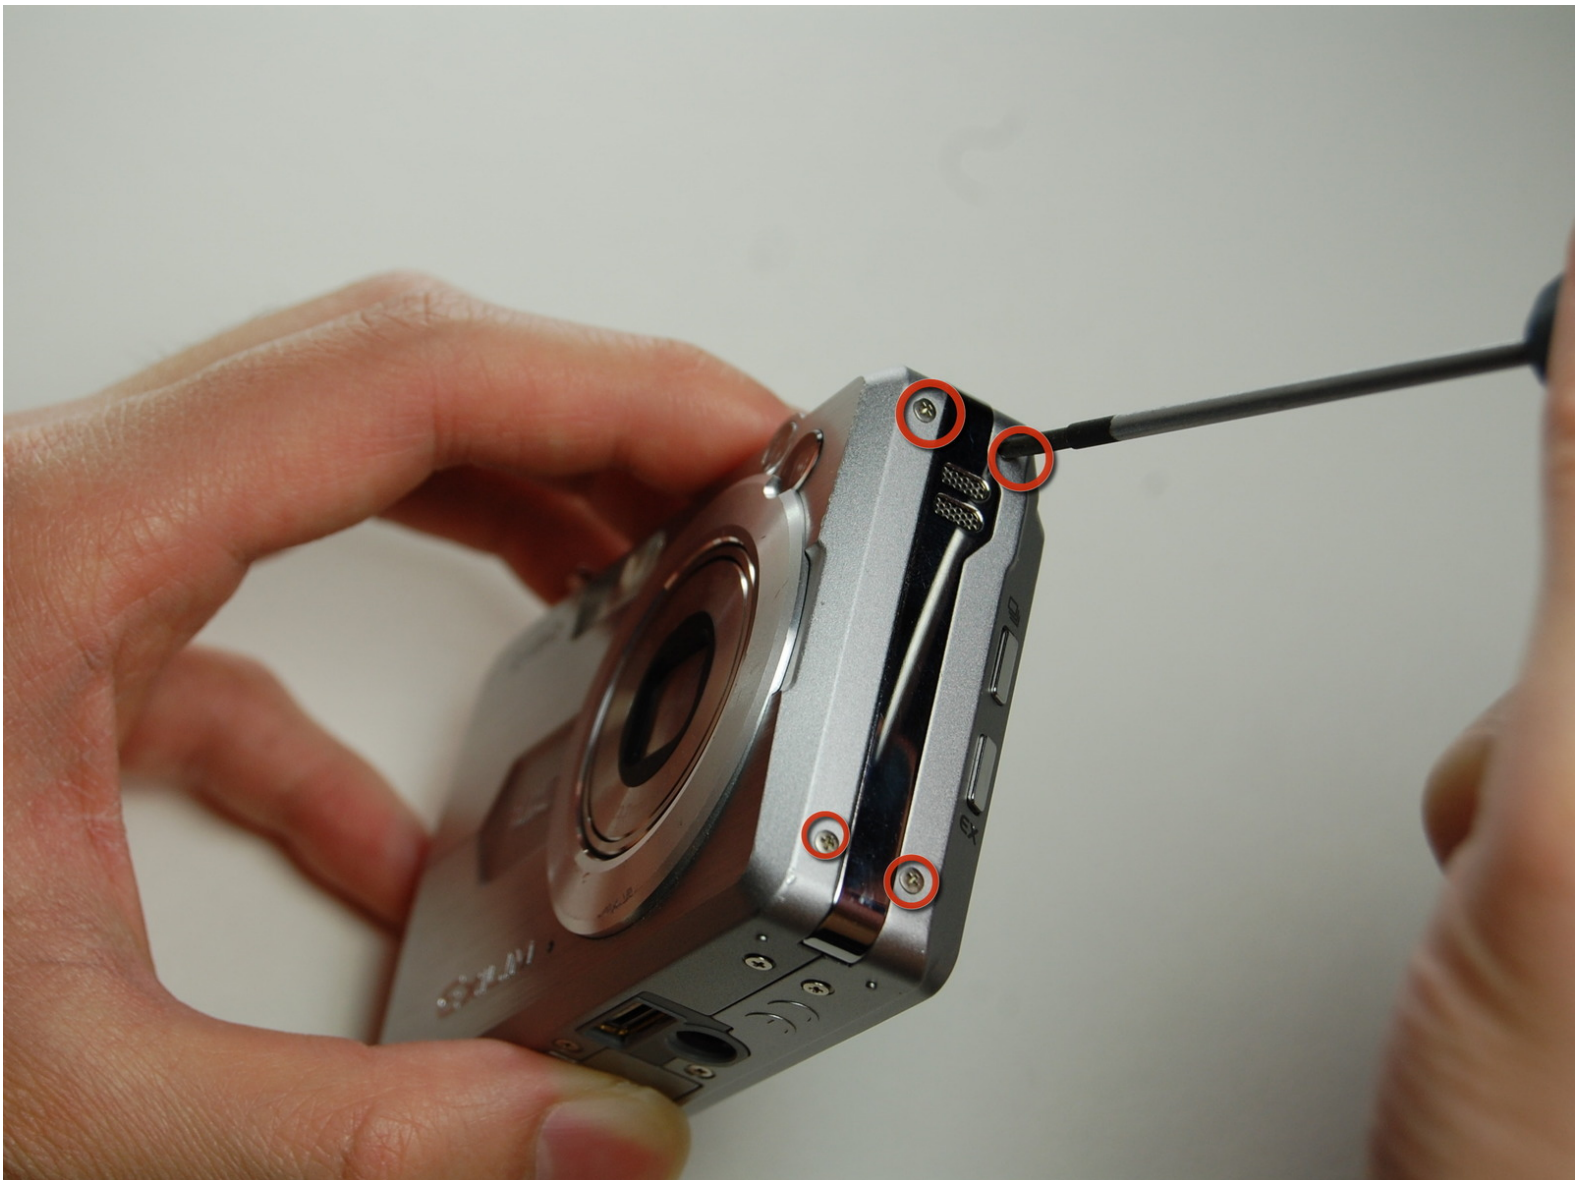

INTRODUCTION


This guide describes how to remove the battery casing for cleaning and to check the connections with the rest of the camera.



PARTS:


- [Phillips #00 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Casio Exilim EX-Z850 Battery Casing Disassembly

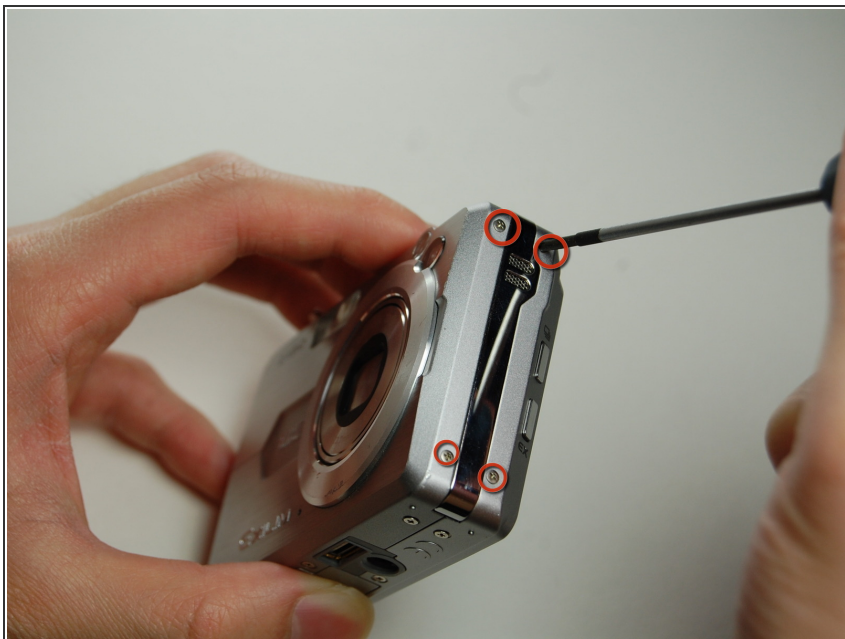


- Remove all four screws on the side of camera with speaker.

Step 2

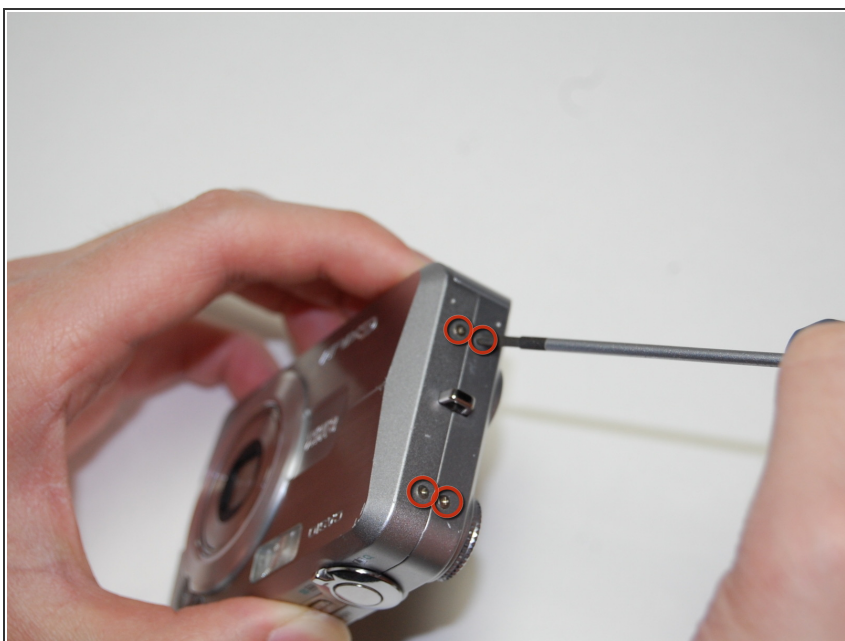


- Remove all four screws from side of camera with wristband attachment.




- Remove all four screws on bottom of camera.
-  **Note:** Bottom screws are longer than the top ones, so label accordingly for easy reassembly.

Step 4

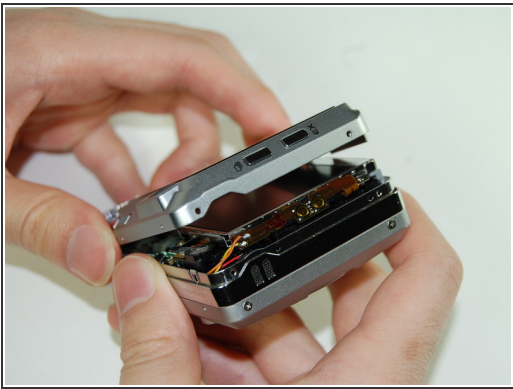



- Once all screws have been removed, gently pry open bottom casing.
- With tweezers, carefully remove ribbon from LCD screen.
- Set bottom casing aside.

Step 5

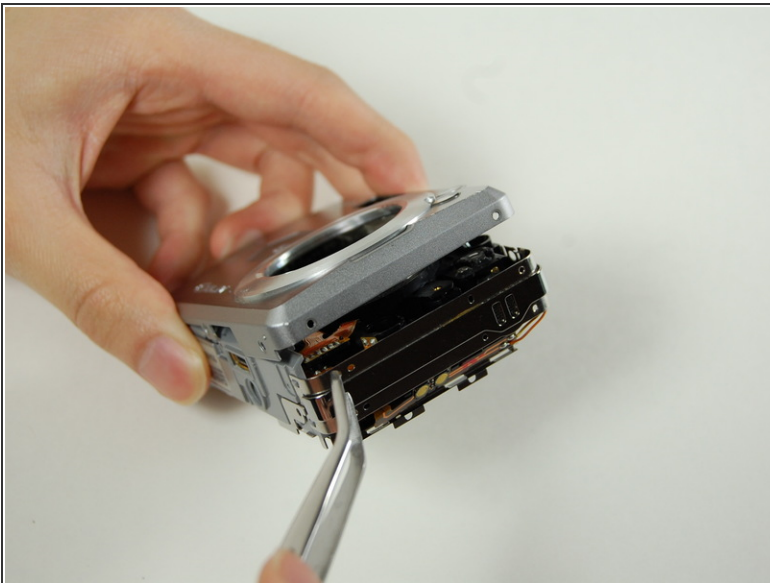

- Gently pry apart the top casing using tweezers.
- Set the top casing aside.


Step 6

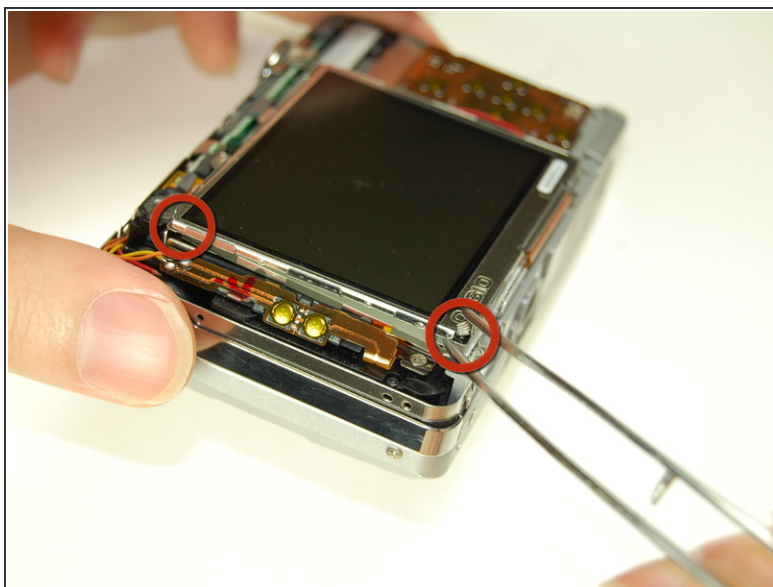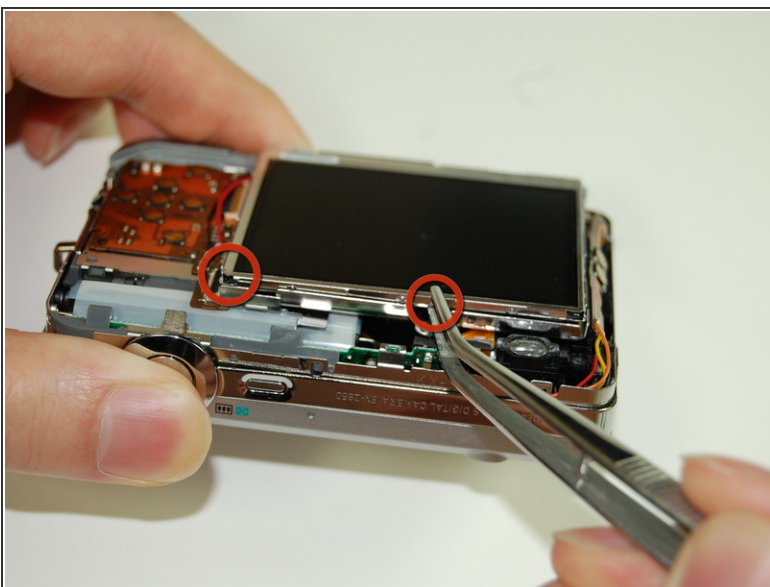

- Use tweezers or prongs to pry the LCD screen off from the opening.


⚠ Note: The bottom of the LCD screen is attached to the frame by a few pieces of black tape.

Step 7

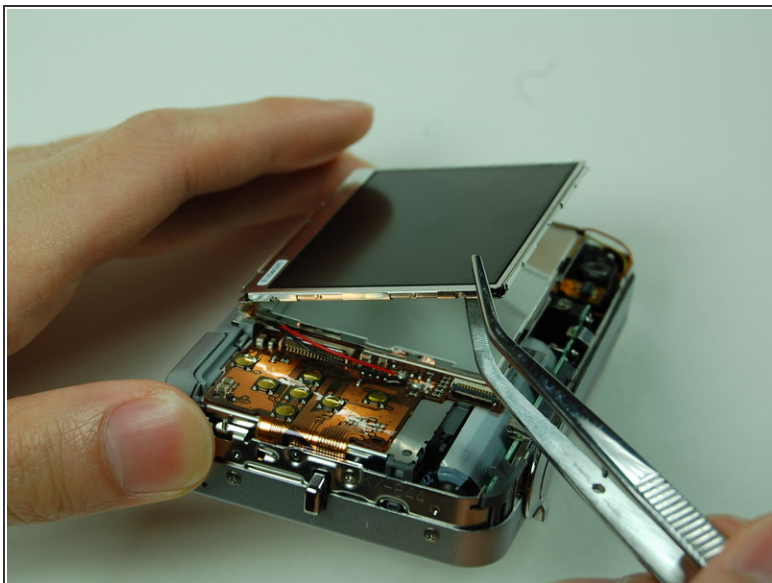


- Lift up the LCD screen, slowly move it to the other side.

Step 8

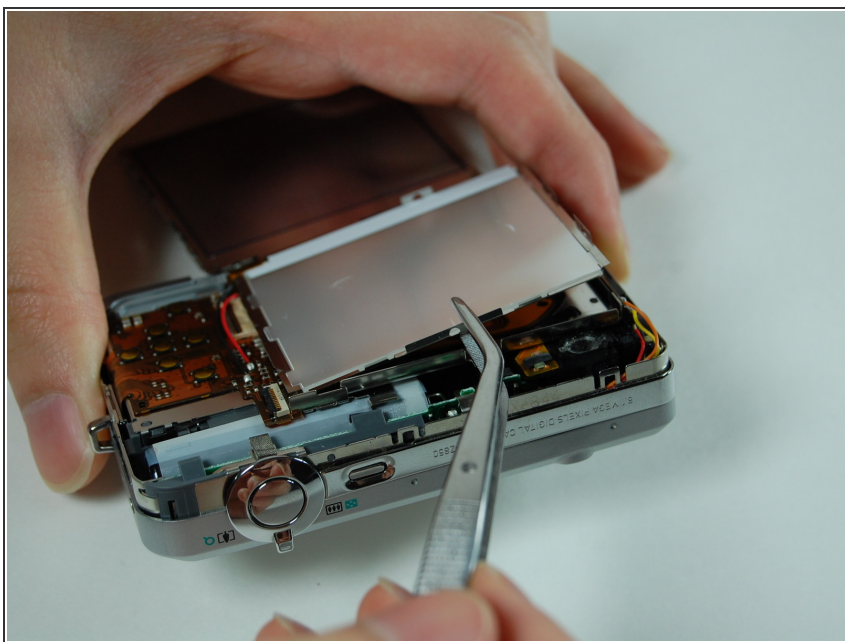


- Pry off the LCD casing.

Step 9

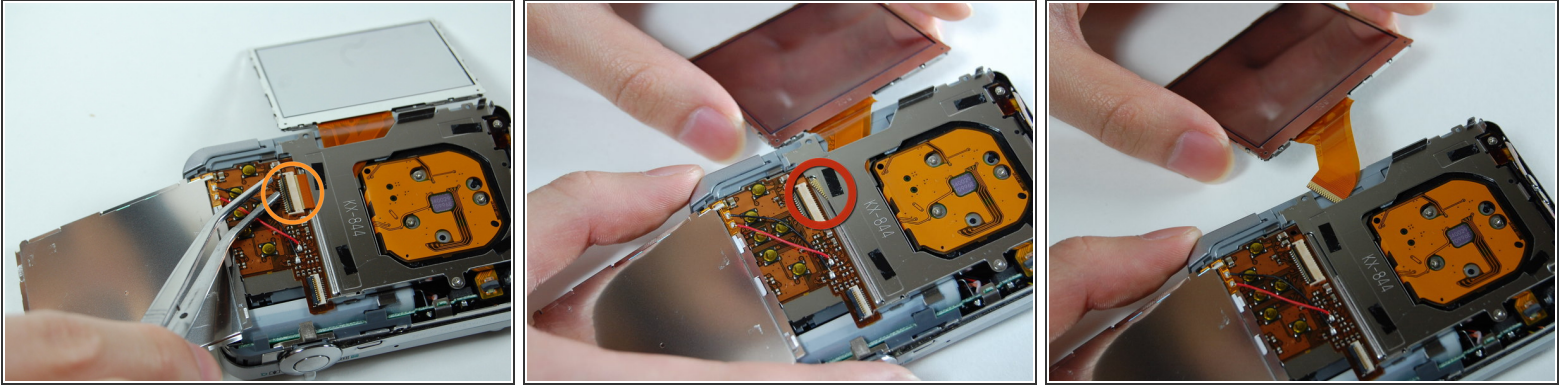



- Flip open the connector holding the ribbon.
- Pull out the LCD screen with the ribbon from the camera.

Step 10

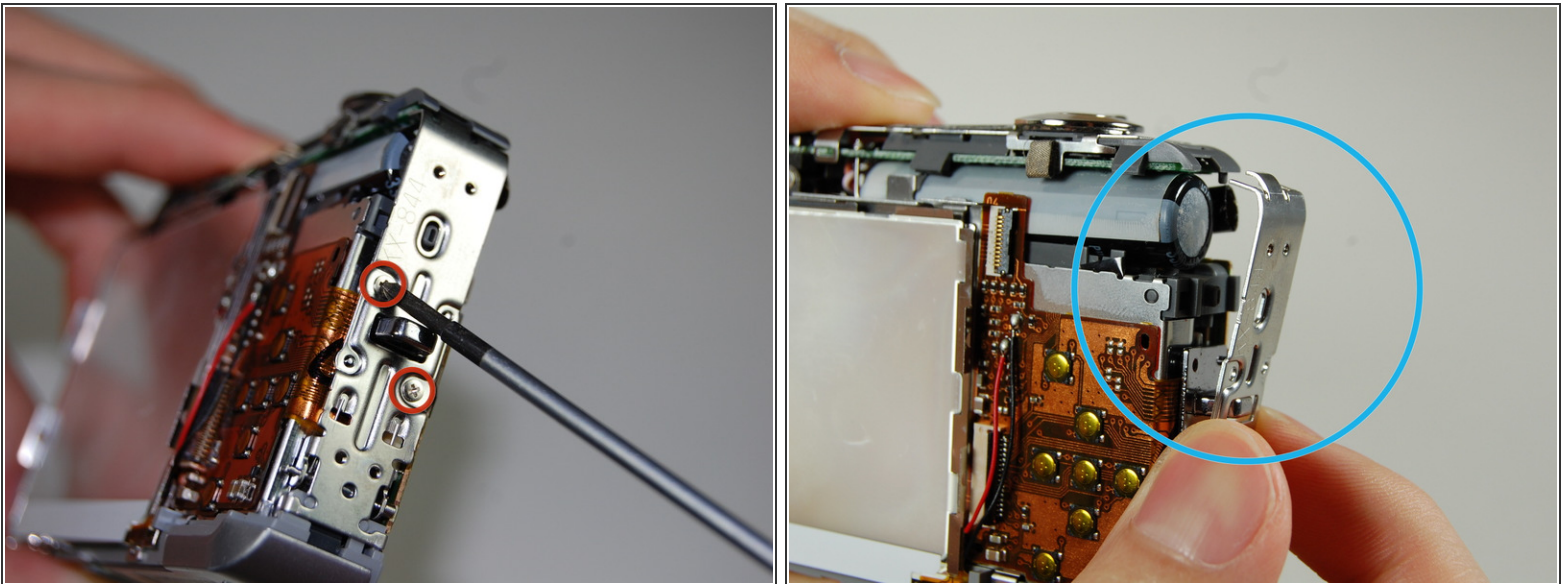




- Remove two screws on the side where the battery is located.
- Remove the lanyard loop after the screws come off.
- Slowly pull the side casing so it becomes dislocated from the top of the camera frame.

Step 11

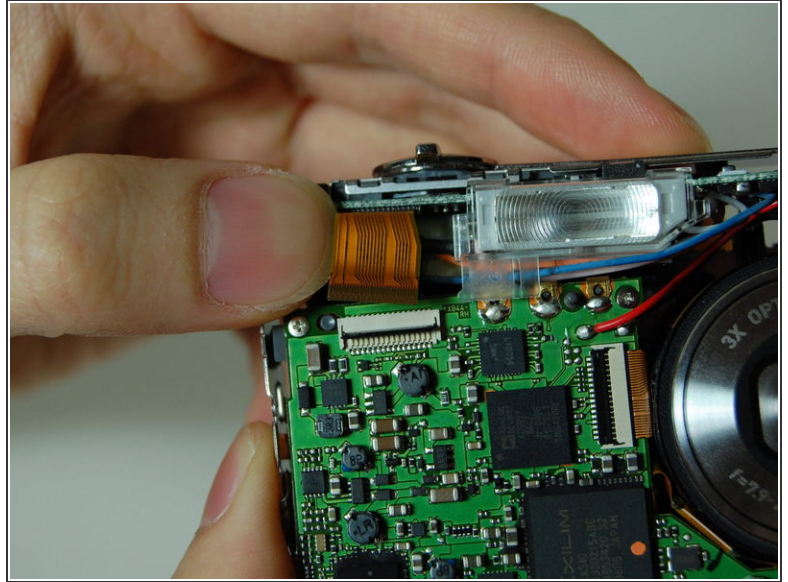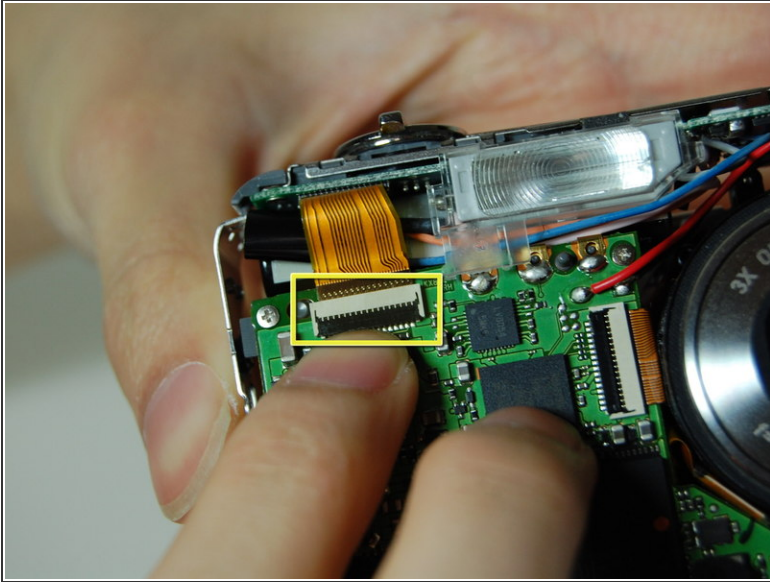

- On the front of the camera, near the flash flip the connector holding the ribbon.



Step 12

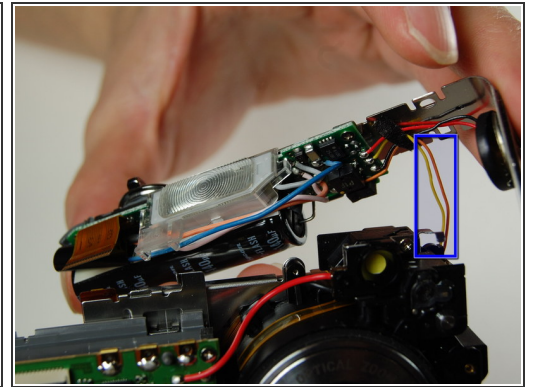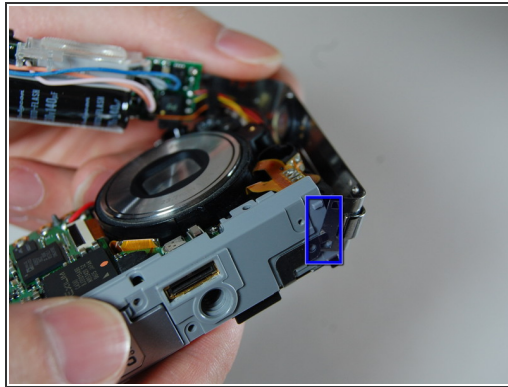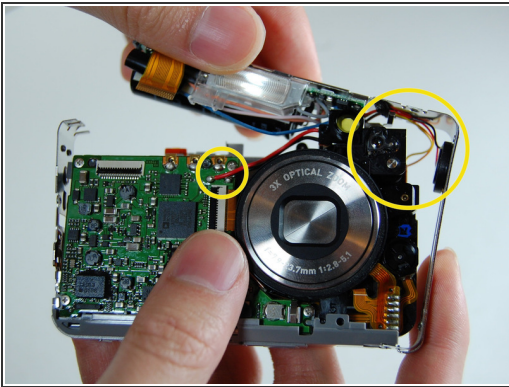

- Carefully remove the L shaped frame from the camera.
- At the bottom of the camera the L shaped frame is being held in by two plastic bumps and a metal tab.
- Pop the frame off the bumps and tabs.



 **Note:** There is a yellow and orange wire soldered onto the camera. Be careful not to pull them off.

Step 13

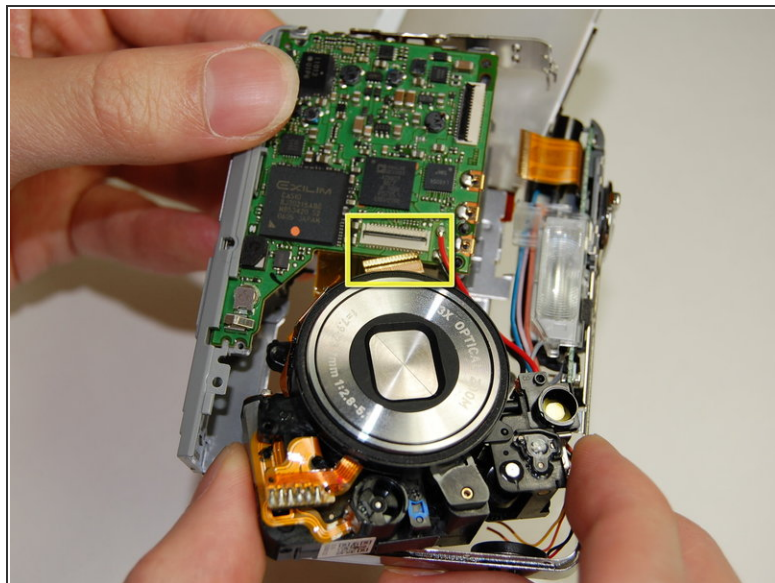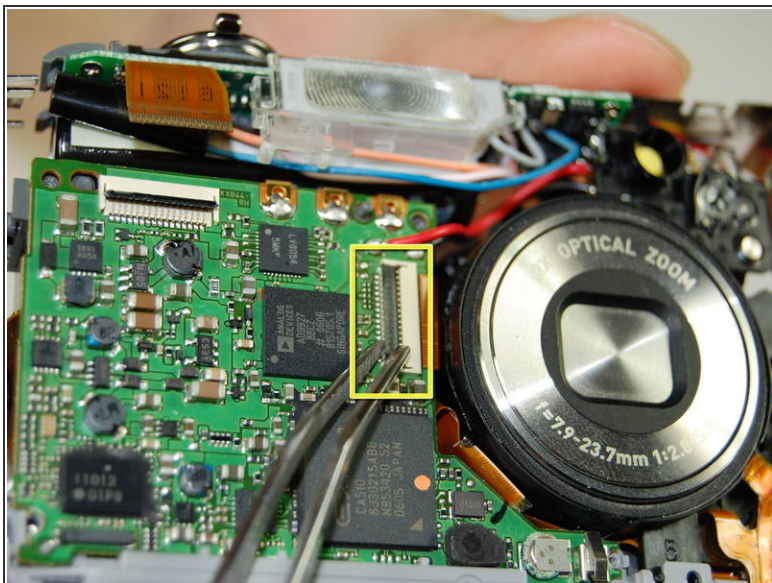



- On the logic board next to the lens is a connector with a ribbon.
- Flip the connector and remove the ribbon.

Step 14

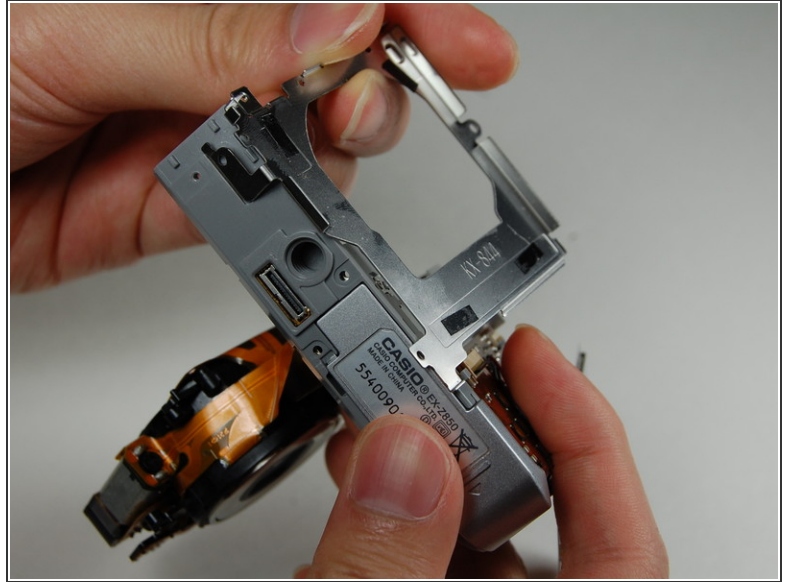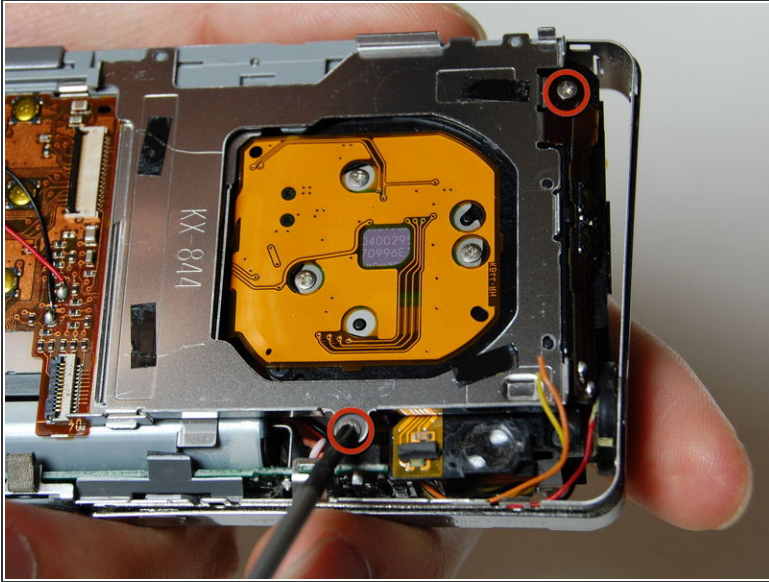

- Remove the two screws connecting the frame with the camera.
- Remove the frame on the back side of the camera where the LCD screen was.
- Slowly pry off the frame from the camera.

Step 15

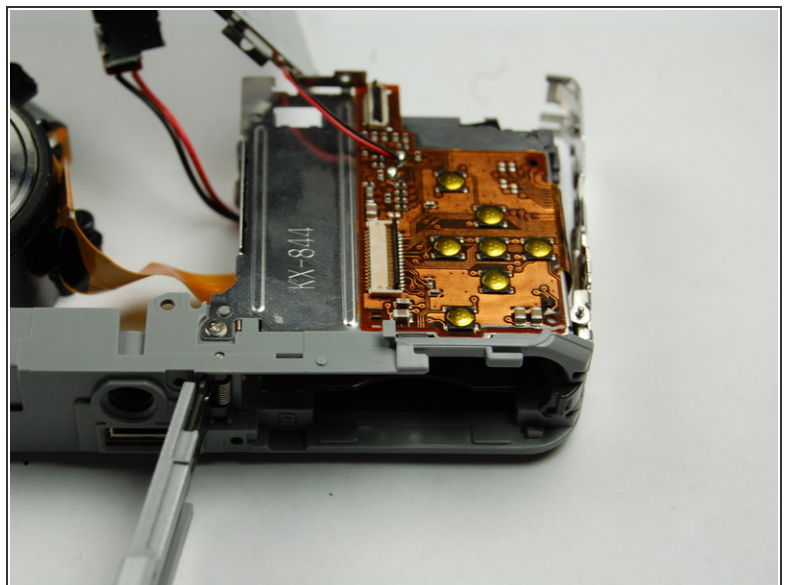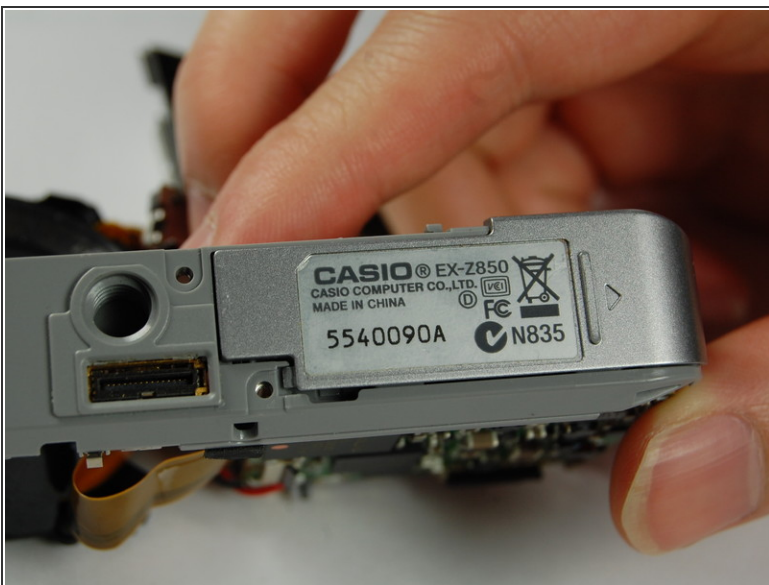

- Now you have the battery casing isolated.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-03 06:45:58 PM.